



Table of area loading



Start Weight (kg)	55	60	65	70	75	80	85	90	95	100	105	110	115	120	125	130	135	140	145
AIRWOLF XS	2,2	2,4	2,6	2,8	3,0	3,2	3,4												
AIRWOLF S			2,5	2,6	2,8	3,0	3,2	3,4	3,6										
AIRWOLF M						2,9	3,0	3,2	3,4	3,6	3,8	3,9							
AIRWOLF L									3,2	3,4	3,6	3,7	3,9	4,1	4,2	4,4			
AIRWOLF XL												3,5	3,7	3,9	4,0	4,2	4,4	4,5	4,7